



RS450

| No. | DESCRIPTION | No. | DESCRIPTION |
|-----|-----------------------|-----|-------------------|
| 1 | Clamp wrench | 23 | BASE |
| 2 | elastic pin | 24 | screw |
| 3 | connection pole | 25 | carbon brush |
| 4 | cushion | 26 | brush box |
| 5 | auxiliary handle | 27 | brush holder |
| 6 | Spring | 28 | capacity |
| 7 | flat cushion | 29 | switch pole |
| 8 | nut | 30 | switch |
| 9 | cover | 31 | wiring terminal |
| 10 | housing | 32 | screw ST3.9X12 |
| 11 | stator | 33 | cable press board |
| 12 | 607 bearing | 34 | cable sheath |
| 13 | Rotor | 35 | cable&plug |
| 14 | 609 bearing | 36 | dust box cover |
| 15 | fan | 37 | dust box |
| 16 | balance block | 38 | circuit board |
| 17 | bearing seat | 39 | screw ST3.9X12 |
| 18 | 6002 bearing | 40 | wind guide ring |
| 19 | back-up plate | 41 | brake ring |
| 20 | Spring cushion | | |
| 21 | screw M5X16 | | |
| 22 | 4 hole pressing board | | |